ECO101-1

PROBLEM	CAUSE	S	OLUTION
THE PUMP WORKS BUT DOES	IRRIGATION VALVE CLOSED	•	open it
NOT INJECT	DIRTY FERTILIZER FILTER	•	clean it
	SUCTION OR IMPULSION RETENTION VALVES DIRTY OR DAMAGED.	•	they must be disassembled and cleaned or changed, and assembled again as indicated
	SEALS N. 20ECO 48 V AND 20ECO 84 V WORN OUT	•	Change them (C)
FERTILIZER IS LOST THROUGH THE OUTLET	SEALS 20ECO 48 V AND 20ECO 84 V WORN OUT	•	change them (C)
	CYLINDER SCRATCHED	•	Call technical assistant
THE PUMPS DOES NOT WORK	FERTILIZER SUCTION, INJECTION, PRESSURE INLET OR REGULATION TURRET VALVES CLOSED	•	open them
	LACK OF WATER PRESSURE	•	working pressure 14 to 116 PSI
	DRAINAGE CLOSED	•	unblock it
	DRAINAGE LEVEL HIGHER THAN THE PUMP	•	drainage level cannot be above the pump level
THE PUMP DOES NOT WORK, CONSTANT DRAINAGE IN GREAT QUANTITY	RETENTION CAMS WORN OUT	•	change them
	DIRTY AXIS DUE TO IMPURITIES	•	clean the water pressure inlet filter. assemble again the pump as indicated under installation and starting operation.
PUMP DRAINS IN EXCESS	SEALS 20COL48 , 20COL 84 AND 20COL 97 WORN OUT	•	change them (C)
PUMP WORKS MORE SLOWLY THAN USUAL	REGULATION TURRET OR WORKING VALVES ALMOST CLOSED	•	open them
	DIRTY FILTERS	•	clean them

(C) CHANGE OF SEALS 20COL 48 - 20COL 48 V - 20COL 84 - 20COL 84 V 20COL 97

- 1. With a screw driver take out the screws from the lid and lift it being careful not damage its joint.
- 2. Take out the piston (if it does not come out, lift very carefully the pressure inlet valve)
- 3. Change the seals without altering their assembly order nor their closing lip.
- 4. assemble again.

(L) CHANGE OF RETENTION CAMS 30LEV ECO

- 1. Take out the piston as shown in above instructions.
- 2. With a screw driver unscrew the plugs of retention cams 30TAP ECO and take out springs 20MUE 8.5X30 and retention cams 30LEV ECO to change them.
- 3. Assemble again without tightening the retention cams plugs in excess 30TAP ECO



13/08/08