

DIAGRAM TO REGULATE THROUGH INVERTER

Dostec-50 Dostec-40,
MF

PARAMETER	1H.P.	0.5 H.P.
A1-01	0	0
B1-01	0	0
B1-02	1	1
B1-17	1	1
C1-01	0.1	0,1
C1-02	0.1	0,1
C3-01	1.0	1,0
D1-01	5,0	5,0
D1-17	50,00	50,00
E1-01	220	220
E1-04	60,0*	60,0*
E1-05	220,0	220,0
E1-07	5,0	5,0
E1-08	22,0	22,0
E1-09	5,0	5,0
E1-10	22,0	30,0
E2-01	2,60	2,60
H1-02	6	6
H2-01	1	1
H3-01	2	2
L1-01	2	2
O4-01	3	0
O4-03	1	0
U2-02	B	0

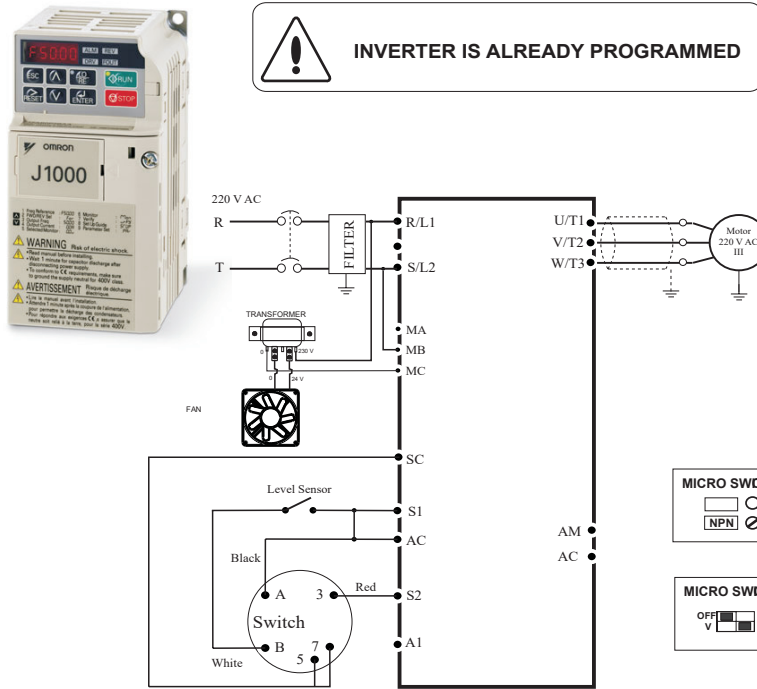


DIAGRAM TO REGULATE THROUGH A CONTROLLER

Dostec-50 Dostec-40,
MF

PARAMETER	1H.P.	0.5 H.P.
A1-01	0	0
B1-01	0	0
B1-02	1	1
B1-17	1	1
C1-01	0.1	0,1
C1-02	0.1	0,1
C3-01	1.0	1,0
D1-01	5,0	5,0
D1-17	50,00	50,00
E1-01	220	220
E1-04	60,0*	60,0*
E1-05	220,0	220,0
E1-07	5,0	5,0
E1-08	22,0	22,0
E1-09	5,0	5,0
E1-10	22,0	30,0
E2-01	2,60	2,60
H1-02	6	6
H2-01	1	1
H3-01	2	2
L1-01	2	2
O4-01	3	0
O4-03	1	0
U2-02	B	0

